





# LIGHTED FLOAT

Battery replacement instructions.  
Item Numbers: LFL, LFM, LFS


\* Extra set of O-rings supplied in retail package.

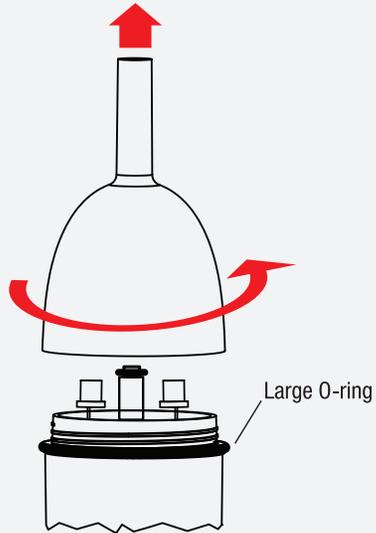


1. Unscrew top of float from bottom. Leave large sealing O-ring on threads in place.

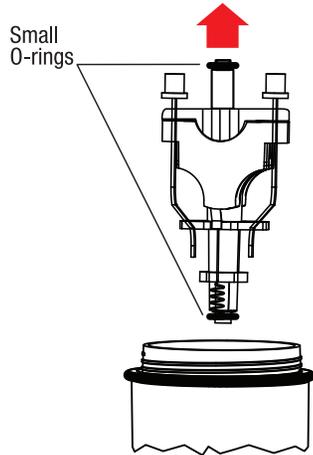


2. Carefully remove battery assembly, pulling straight up from bottom of float.  
\*NOTE: Be careful not to remove the small O-rings at top and bottom of assembly.

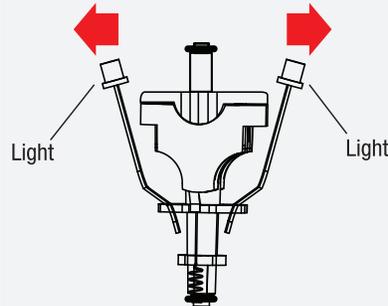


3. One at a time, carefully pull lights away from battery assembly.

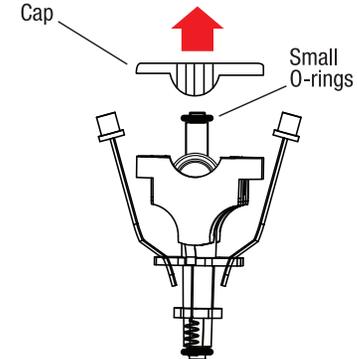


4. Gently pull cap off battery assembly by pulling straight up.  
\*NOTE: Be careful not to remove the small O-rings at top and bottom of assembly.

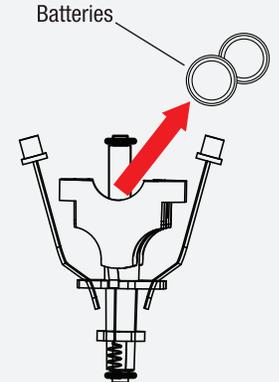


5. Remove old batteries from assembly noting +/- orientation.

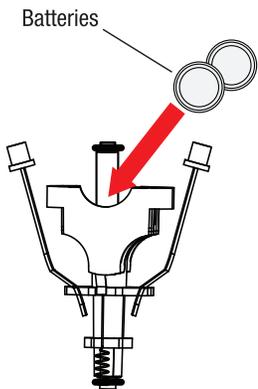


6. Replace with new batteries in the same +/- orientation as the old batteries.

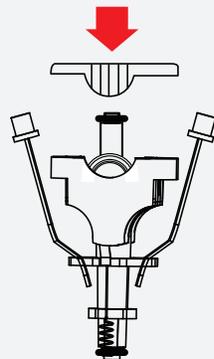


7. Replace cap onto battery assembly. Press firmly into place.

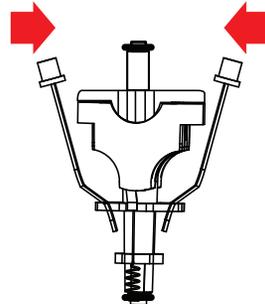

8. One at a time, carefully position lights back into cap.

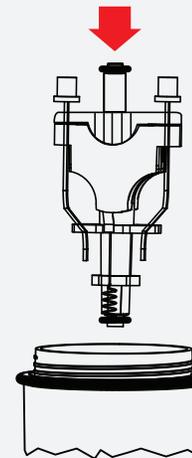

9. Reseat battery assembly into bottom of float aligning the assembly with the guides inside of float.

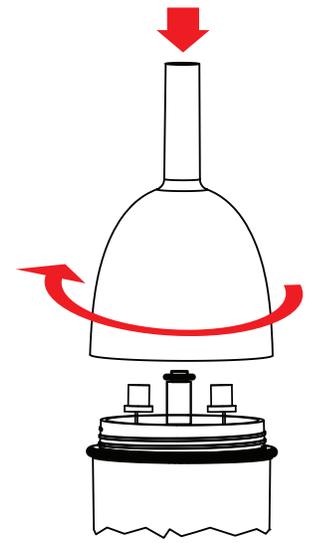

10. Screw on top of float snugly without over tightening.